

# 1 Insert tool and twist trim ring off




# 2 Open cable lock and unplug cable




# 3 Peel off touchpad and adhesive



# 4 Align Crystal arrows with cutouts

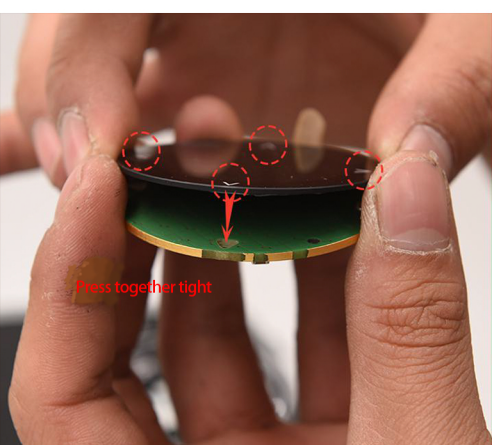

**5** Fit plastic ring tabs in holes like this:

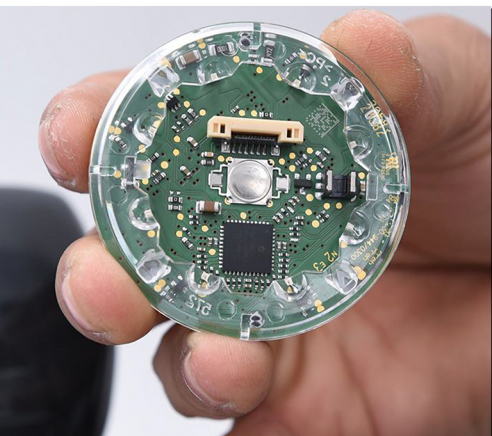

**6** Snap in cable and tighten lock



**7** Snap in trim ring in this position:



**8** Installation is complete.

